



With LinkSmart® and San-a-Key®, your keyboard will always be clean

CLEANING INSTRUCTIONS

KSI-1700, 1800, 2000 SX SERIES LINKSMART® KEYBOARDS
with no-download San-a-Key® Lite



Step 1 — PUSH the easy-clean red LinkSmart® button once to disengage keys. The keys lock, and the Num lock, Caps lock and Scroll lock LED's flash simultaneously, indicating the keyboard is in cleaning mode. You are now able to wipe the surface without risk of entering errant data.



Step 2 — WIPE the keyboard surface with an approved germicidal cloth. Use only KSI-approved wipes. Cover all areas of the keyboard until thoroughly cleaned. Gloves should be worn when using approved wipes, which can be toxic.



Step 3 — PROTECT the keyboard against infection by allowing the surface to remain wet for 30 seconds. Allow one minute of contact time to kill viruses. Allow a three-minute wait time to kill C.difficile spores. Keys are automatically reengaged after completion of the cleaning cycle for resumption of input.



DOWNLOAD OUR OPTIONAL, NO-COST SAN-A-KEY® PRO SOFTWARE
WITH ONSCREEN CLEANING AID AT

WWW.SANAKEY.COM